



Hot Key Define:

- **Fn + pad /** : Launch the Keyboard backlight application
- **Fn + pad *** : Main LED Switch (Toggle all LEDs On/Off , except the Power button LED)
- **Fn + pad -** : Keyboard LED illumination Decrease only(not for Volume Bar and Tail light)
- **Fn + pad +** : Keyboard LED illumination Increase only (not for Volume Bar and Tail light)
- **Fn + pad 5** : Toggle Touchpad LED On/Off only
- **Fn + pad 7** : Toggle Left portion of Keyboard LED On/Off only
- **Fn + pad 8** : Toggle Center portion of Keyboard LED On/Off only
- **Fn + pad 9** : Toggle Right portion of Keyboard LED On/Off only
- **Fn + " (vertical line)** : Toggle Volume Bar On/Off only

Software Requirement:

- P150SM, P157SM, P170SM, P177SM series:
 - BIOS version: 1.00.06 or later version
 - EC-Firmware version: 1.00.05 or later version
 - Hotkey Drivers version:
 - For Windows 7: version: 7.0026 or later version
 - For Windows 8: version: 8.0129 or later version
- P370SM, P375SM series:
 - BIOS version: 1.00.03 or later version
 - EC-Firmware version: 1.00.05 or later version (regular EC-Firmware)
 - **EC2-Firmware version: 1.00.02 or later version (special for KB LEDs controller)**
 - Hotkey Drivers version:
 - For Windows 7: version: 7.00301 or later version
 - For Windows 8: version: 8.0134 or later version